



# ASSEMBLY INSTRUCTIONS

Photo Real Scale Building Kit by **INNOVATIVE** HOBBY SUPPLY

**Movie Theater**

- A new alternative to plastic form scale building models!
- Photo Real Scale Building kits may be the most realistic kits available!
- Great for use on model dioramas, slot car, and train track layouts!
- Designed using photos of real building elements for the most realistic appearance



## Footprint Dimensions

Model Base  
8" x 11"

Movie Theater 5" x 9"

*All scale building kits offer many optional features, for a variety of creative ways to complete each project!*

Free replacement parts are available  
call: 866-712-4059




### STEP 1 - Collect the correct tools.

For best results, we suggest you gather at least the most basic tools you will need to complete assembly. While you may find more tools that will help you achieve outstanding results, we suggest you start with the following: Hot glue gun, scissors, variety of water based colored markers, tweezers, straight edge rulers, hobby knife, instant setting high strength hobby glue.




STEP 2 - Empty contents of the kit, and carefully cut out all the individual parts to be assembled. Please note that the most precise cuts you can make will result in a dramatically better looking finished project.

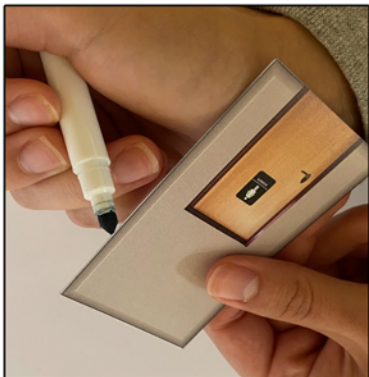


STEP 3 - With appropriate color markers, detail the edges of all the parts you cut out. This will result in a finely finished project once assembled.


STEP 4 - **Scoring.** Using a scoring tool (see picture) and a straight-edge ruler, apply pressure onto the surface of the part you wish to bend, on top of a line you want to fold. This is called scoring. Scoring along lines to be bent makes bending all printed parts easier, and results in a much cleaner looking fold. Bend parts using the length of your straightedge ruler. Scoring is an essential skill.

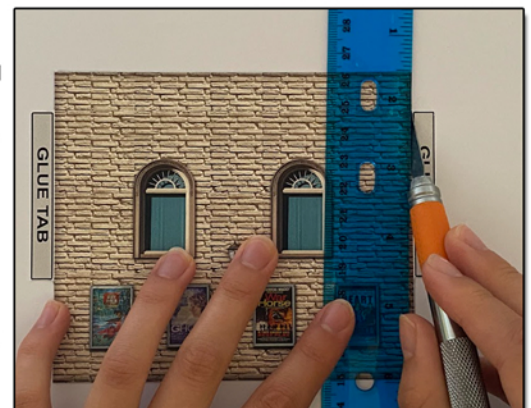



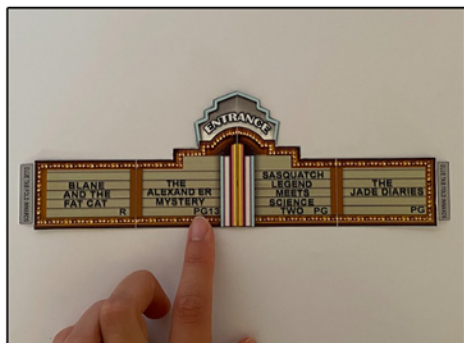


STEP 5 - With scale building kits, there is usually no correct place to begin. In this case, we'll start by assembling the Movie Front Marque 3D Sign. Cut out the sign carefully. Score and Fold the white line in the middle of the sign.

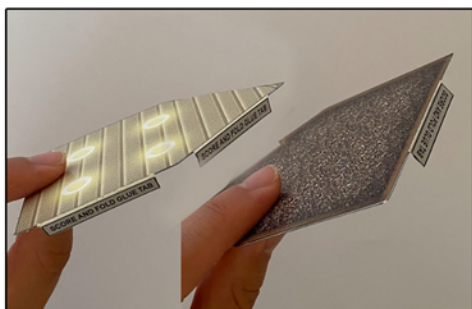

STEP 8 - Score and Fold the Glue Tabs downward like the photos above. When scoring use a straight edge.




Step 11 - Grab the Marque bottom after the Top Marque is secured on to the Movie Theater sign completely. Glue tabs on the Marque Bottom should be pointing away from the art, so they are not visible when connecting the bottom to the sign. Place white glue on the glue tabs then apply the Marque bottom to the rest of the sign. Hold until dry. Now that the Movie Sign is complete let's move on to the next step.

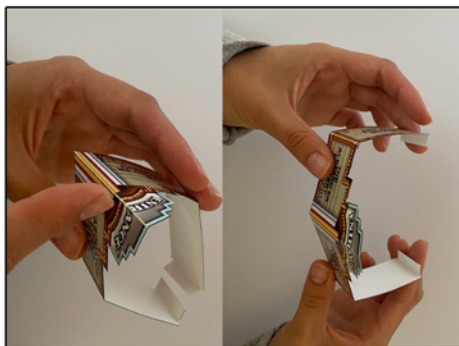


STEP 6 - As you can see, the picture above on the left, after its scored and folded, it would look like this. After Score the sides on the Movie sign on the white lines. Fold like the photo above. Lastly score and Fold the Glue tabs. Then set this on the side for later.




STEP 9 - Next place the Top Marque on the back middle between the Movie Theater Sign, so it locks together. When you understand the placement of the two, place a small amount of hot glue below the front pointy part of the Top Marque/against the back of the Movie Theater sign together so it holds.

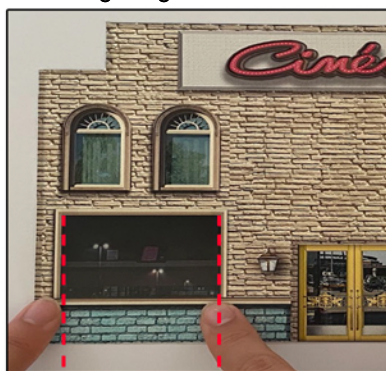


Step 12 - Now lets assemble the Front wall windows. Cut directly straight up from the bottom of the wall on the blue brick to the inside of the window, avoid cutting the window frames. Stop cutting straight up when your about to hit the top part of the window frame. Were only cutting the sides. Repeat on the other side. Like shown above.

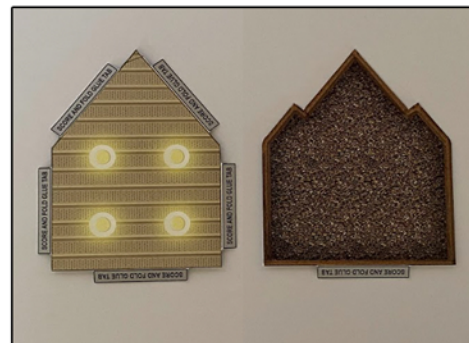

Step 7 - Now grab the Marque Bottom, and the Top Marque.

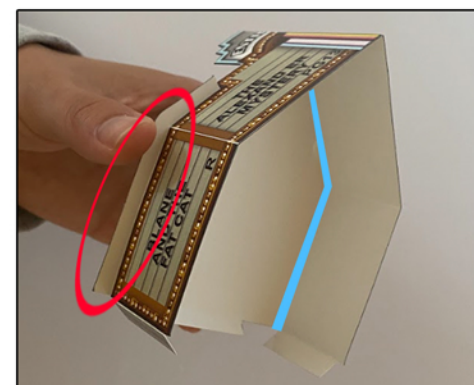


STEP 10 - After securing the front part of the Movie Theater Sign with the Top Marque front, turn the whole thing to the side so you can see the inside, like shown above. Line up the Movie Theater sides evenly with the Top Marque one at a time (the red circle) When one side is evenly lined up, place a small trace of hot glue against the inside. For an example, I drew a (blue line) to show the glue placement. Hold both the Movie Theater Sign and the Top Marque together until dry, repeat on the other side.

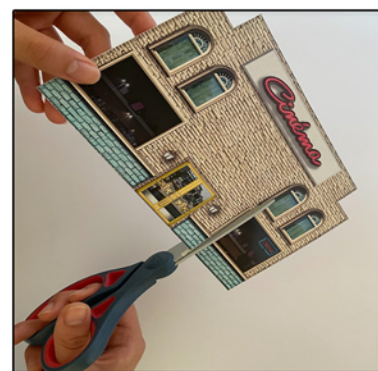

Step 13 - After both sides are cut on the windows, you should have created a flap. Go to the next page to see the rest of the instructions.




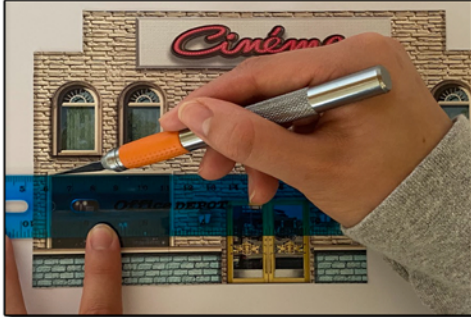

STEP 14 - Now grab a straight edge, and a Hobby knife. Place/line up the ruler right below the top window frame, so your only cutting out the inside of the window. Use Hobby knife to carefully cut.




STEP 17- After Window Bottoms are attached it should look like this. And now there should be window openings.

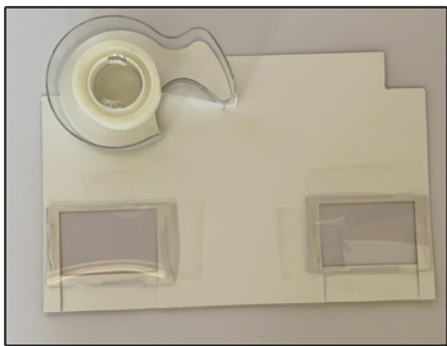


STEP 20- Place the glass evenly on the window openings evenly. Use small pieces of tape to secure it on to the back of the front wall. Use steps 18, 19 for both windows.



STEP 15 - When both sides are cut out, you should be left with this. Inside the red circle is what we cut out, you can toss these away.

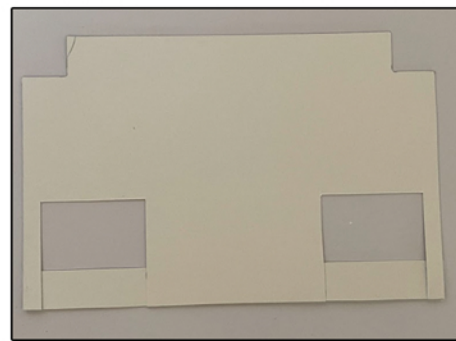


STEP 18 - Then flip the Front wall so the white side is facing towards you. And grab the two glass pieces included in the kit.

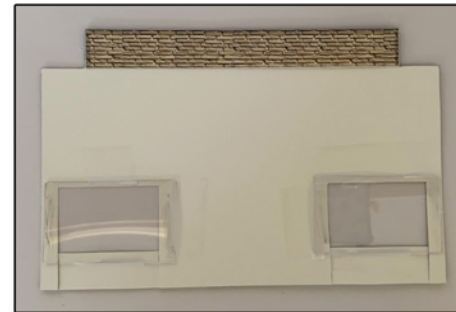


STEP 21 - After the windows are assembled, grab the Top Front Wall Backer. Place it evenly on the top indented part of the front wall. Like shown above.



STEP 16 - Now grab the Window Bottoms. Place each window bottom on top of the Front wall where the blue brick was originally. Line up carefully so that the bottom of the front wall is even. Use a small amount of white glue to attach, let sit until dry completely.

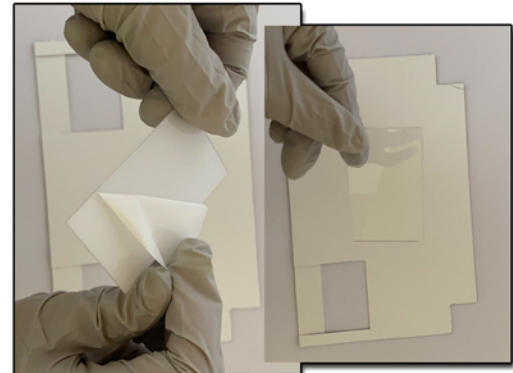


STEP 19 - I recommend putting on gloves on to avoid finger prints. When gloves are on, take of the plastic wrap off both sides of the glass, until you can see through.

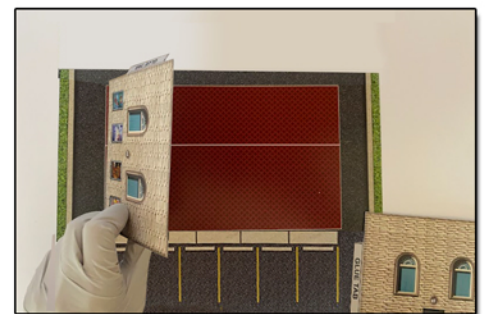


STEP 22 - Now that the Front wall is assembled, put it aside for later. Grab the two side walls. Place the correct wall to the matching side. Like shown in the photo above, make sure the wall is upsided the right way. Go to next page to see step 23



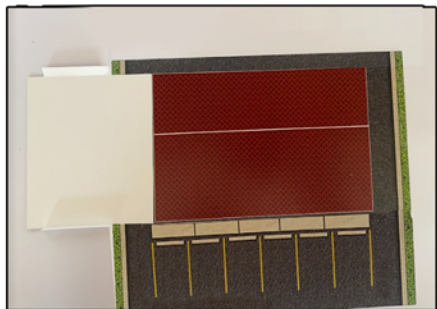

STEP 23 - After making sure the correct side wall is upside the right way, for an example the movie posters on the side wall is closest to the ground. Then gently tilt it downwards so we can see the white side. Also make sure the side wall is lined up with the base too.

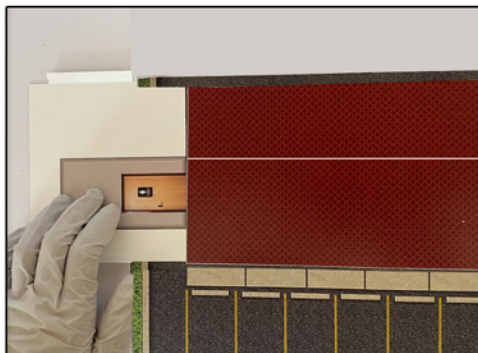

STEP 24 - Grab the matching side wall illusion room with the correct wall. Place the correct Side Wall illusion Room on top of the actual building Side Wall, but the white side like shown above. Line up the Side Wall illusion Room to the middle white line on the base. When lined up with the white line and to the end of the side wall, glue into place with white glue. Let dry and repeat on other side wall. Put these aside carefully when dry.



STEP 26 - Now lets glue the Front wall to the base. Line up the front wall with the front of the base. Then use small amounts of hot glue behind the front wall to secure in place, hold until dry.



STEP 27 - After the Front wall is glued down, let's glue the side walls we assembled from earlier. Line up the correct wall to the correct side of the base. Line up the illusion rooms together too. Glue the glue tab on the side wall closest to the front wall first. Use a small amount of hot or white glue to secure wall into place. Then secure the glue tab on the Movie theater inside illusion wall on to the inside of the side wall. Repeat steps for both sides.



STEP 25 - Before gluing down the side walls on to the base, grab the Movie Theater Inside illusion Wall. Score and fold the glue tabs. Fold the tabs behind the art. Glue the wall on to the white line found on the base. It's the line in the middle of the red carpet. Place it 90 degrees from the base. Use small amounts of hot glue behind the wall to hold it in place. Hold until dry.  
\*Make sure the art of the wall is facing the parking lot\*



STEP 28 - Now grab the Movie Theater Back Wall and the Back Inside illusion Wall. Flip the Movie Theater Back wall so the white side is facing you.



STEP 30 - Glue the back wall to the rest of the building with white or hot glue.



STEP 29 - Place the Back Inside illusion Wall on top of the white side of the Movie Theater Back Wall evenly. Line up the bottoms together. Glue with white glue. Wait until dry.



STEP 31 - Now that the whole building is assembled, let's glue on the Movie Theater Sign to the front wall. Use the glue tabs to secure the sign on to the wall. Glue evenly between the windows, also place it just right above the front door. Like shown above.



STEP 32 - Let's apply the roof. In the kit there is optional 3D add-on Roof Vents. Place a small amount of hot glue on the already existing vents on the roof, then place the 3D roof vent on top. Adds a nice affect.



STEP 33 - There is an optional Front 3D Sign you can glue on to the front wall.



STEP 34 - Next there is also Optional Front Lower Window Awnings. Score and Fold the glue tab downwards. Place a small amount of hot glue on the tab. Place above the lower front glass windows.

## ***Go to the next page to see the final results.***





# ASSEMBLY INSTRUCTIONS

*Photo Real Scale Building Kit by*

**INNOVATIVE**  
HOBBY SUPPLY

**Movie  
Theater**




Front of Building



Left Side of Building



Right Side of Building

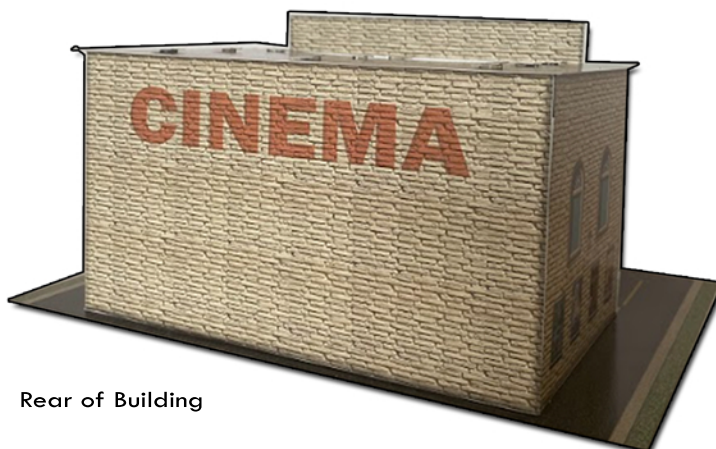

Rear of Building